

MX-200 Quick Key Map

Use the map below to find the instrument you wish to use and then send the appropriate Variation Select (MSB) and Program Change message for that instrument.

To send a program change from a Rodgers Classic Organ™, hold [SET] and press the MIDI piston you wish to program. As the piston flashes, press the key or pedal which corresponds to the voice you wish to select.

To use the MX-200 Quick Key Access with a Rodgers organ, the organ's MIDI coupler must also be set using the organ's Alpha Dial and Select Knob:

- For Rodgers Trillium organs: set MSB to 65–69 as shown on the map, and set LSB to 0.
- For Rodgers non-Trillium organs: set VAR to 65–69 as shown on the map.

CHOIR (3 Manual) / ~~GREAT (2 Manual)~~

Capital Tone (MSB: 65)		PC	Variation 1 (MSB: 66)	Variation 2 (MSB: 67)	Variation 3 (MSB: 68)	Variation 4 (MSB: 69)
Pop Piano MX	Grand MX	1	Warm pF Mix			
Y2K Concerto	Fat Rhodes	2	Sparkle Piano	Honky Tonk MX		
Rholitzer		3	Piano + Strings	Piano + Soft Pad		
Stacc.Heaven	Stereo Harpsichord	4	Stage 73	Hit Rhodes		
Harpsichord F/B/B4	Soft Celesta	5	Smooth Rhodes	Mr.Mellow		
MX Glocken	Music Bells	6	Morning Lite	Air Pad	Glistening	Phazweep
Warm Vibes		7	Harpsichord Front	Harpsichord Back		
Dyna Marimba	MX Xylophone	8	Harpsichord F4/B			
Tubular Bells	Handbell	9	Celestabox			
Soft Perky		10	Holiday Cheer	2020 Bell		
Ballad B	Surf's Up!	11	2.2 Bell Pad			
MX Church Organ 1	Church Harmony	12	True Vibe	Ambience Vibe		
Cathedral	Harmo Blues	13				
MX Accordion		14				
Soft Nylon	Steel Away	15	Belfry Chime			
Jazz Guitar Hall	Chamber Strings	16	Church Bell	Chime Bells		
Chamber Quartet		17	Soft B	Rocker Spin		
Lead 4x Violins	Octave Strings 2	18	Perky B	Gospel Spin		
Contrabass Section	MX Acoustic Bass	19	D-50 Organ	Full Stops		
Nylon Bass	Pop Bass	20	MX Church Organ 2	MX Church Organ 3		
Basic Fretless		21				
Timpani Roll	Harmonic Strings	22	Wedding Mass			
Full Orchestra	Brassy Symphony	23				
Warm Violin		24				
Slow Violin/Cello	Real Cello	25	Nylon Guitar	Nice Guitar	Guitar & Pad	Desert Crystal
Violin/Cello 1	Full Tremolo	26	Thick Steel			
Orchestral Pizzicato	Harp	27				
MX Timpani 2		28	Baroque 1			
Strings Ensemble	MX Strings	29	Full Chamber Strings			
Lush Strings 2	Octave Strings 1	30	Expressimo			
Real Choir		31	Orchestral Strings			
Boys Choir Ooh	Voyager Brass	32	Octave Strings 1	Slow Octave Strings		
Valve Job	MX Trumpet	33				
Mild Trombone	MX Tuba	34				
Cup Mute		35	Tap Bass			
French Horn Section		36	MX Fretless			
		37				
		38	Soft Symphony			
		39	My Orchestra			
		40				
		41				
		42	Baroque 2			
		43	Warm Cello			
		44	Violin/Cello 2			
		45				
		46	Bass Pizzicato	Full Pizzicato mp		
		47				
		48	MX Timpani 1	Orchestral Percussion Set		
		49	Marcato			
		50	Ultra Smooth			
		51	Fat Strings			
		52	Film Octaves	Wide Strings		
		53	Stereo Choir	Spaced Voxx		
		54	Boys Choir			
		55	Slow Dark Brass			
		56	Ceremonial			
		57	Mellow Horn			
		58	Trombone			
		59				
		60	Harmon Mute			
		61	Soft Horns	Bright Horn		

GREAT (3 Manual) / SWELL (2 Manual)

Capital Tone (MSB: 65)	PC	Variation 1 (MSB: 66)	Variation 2 (MSB: 67)	Variation 3 (MSB: 68)
Fanfare		62 New R&R Brass		
Massed Horns	Orchestral Brass	63		
Alto Sax	Soprano Sax mf	64 Soaring Horns		
MX DynoTenor		65		
Oboe Vibrato	Full Saxz	66 Solo Alto Sax	Breathy Sax	
Bassoon/English Horn	English Horn	67 Swingin' Bari		
Bass Clarinet	MX Clarinet	68 Sax Choir		
Tender Flute		69 Oboe mf		
Wind Wood	Soprano Recorder	70 Swell Ensemble		
Pan Pipes	Chamber Woods	71		
32' Contra Violone		72 Clarinet mp		
32' Bazuin	32' Untersatz	73		
16' Posaune	32' Posaune	74 Flute	Fifes	
16' Montre	32' Contre Geigen	75 MX Ocarina		
16' Pommer	10-2/3' Gross Quint	76 Wood Symphony		
8' First Diapason	8' Second Diapason	77 Wind Multi		
8' Harmonic Flute		78 Lochscapes	The Andes	
8' Quintadena	4' Major Flute	79		
1' Siff flute	IV Fourniture	80		
IV Scharf	II Sesquialtera	81		
IV Cornet 4'		82		
16' Cello Celeste II	16' Erzahler Celeste II	83		
16' Viols Chorus II	8' Cello Celeste II	84		
8' Muted Viols II		85		
8' Viols Chorus IV	4' Violina Celeste II	86		
4' Erzahler Celeste II	4' Flute Celeste II	87 21-1/3' Grave Diapente	5-1/3' Gross Quint	3-1/5' Gross Terz
8' French Horn	8' Cor d'Amour	88 8' Voce Umana II		
8' English Horn		89 8' Second Diapason (w/T)	8' Voce Umana II	Principal Chorus 8', 4', 2'
8' Vox Humana	16' Royal Trumpet	90 8' Harmonic Flute (w/T)		
8' Royal Trumpet	8' Royal Tuba	91 8' Quintadena (w/T)	16' Quintadena	
16' Tibia Clausa		92 4' Major Flute (w/T)		
8' Tibia Clausa	Tibias 8', 4'	93 8/9' None		
4' Tibia Piccolo	2-2/3' Tibia Twelfth	94 IV Grave Mixture	IV Echo Mixture	
2' Tibia Piccolo	8' Vox Humana	95 II Jeu de Clochette		
8' Kinura		96 II Sesquialtera (w/T)		
16' Posthorn		97 IV Cornet 4' (w/T)		
		98		
		99		
		100		
		101		
		102		
		103 4' Viols Chorus II		
		104		
		105		
		106		
		107 8' French Horn (w/T)		
		108 8' Cor d'Amour (w/T)		
		109 8' English Horn (w/T)		
		110 8' Vox Humana (w/T)		
		111		
		112 4' Royal Trumpet	Royal Trumpets 16', 8', 4'	
		113		
		114		
		115		
		116 Tibias 8', 4', 2'	Tibias 16', 8', 4', 2'	
		117		
		118 5-1/3' Tibia Fifth	1-3/5' Tibia Tierce	
		119 1' Tibia Fife		
		120		
		121 8' Kinura (w/T)	2' Zink	
		122 8' Posthorn		

* w/T = with Trem

LSB: 0

SWELL (3 Manual) / PEDAL (2 Manual)

Capital Tone (MSB: 65)	PC
Concert Bass Drum	123
Orchestral Snare	124
Ride Cymbal	125
Triangle	126
	127
	128